


Bind to App Guide


Initial steps to follow

1. Ensure the Deco X58 is turned on and the light is green
2. Ensure you are connected to it's wi-fi and that you can access the internet.
3. Download the TP-Link App from your app store
 - a. Google Play - https://play.google.com/store/apps/details?id=com.tplink.tpm5&hl=en_NZ
 - b. Apple App Store - <https://apps.apple.com/us/app/tp-link-deco/id1186159417>
4. A TP-Link account has been created and activated during the initial use of the app.


App Steps to Follow


1. Grant Location Permission to the app.

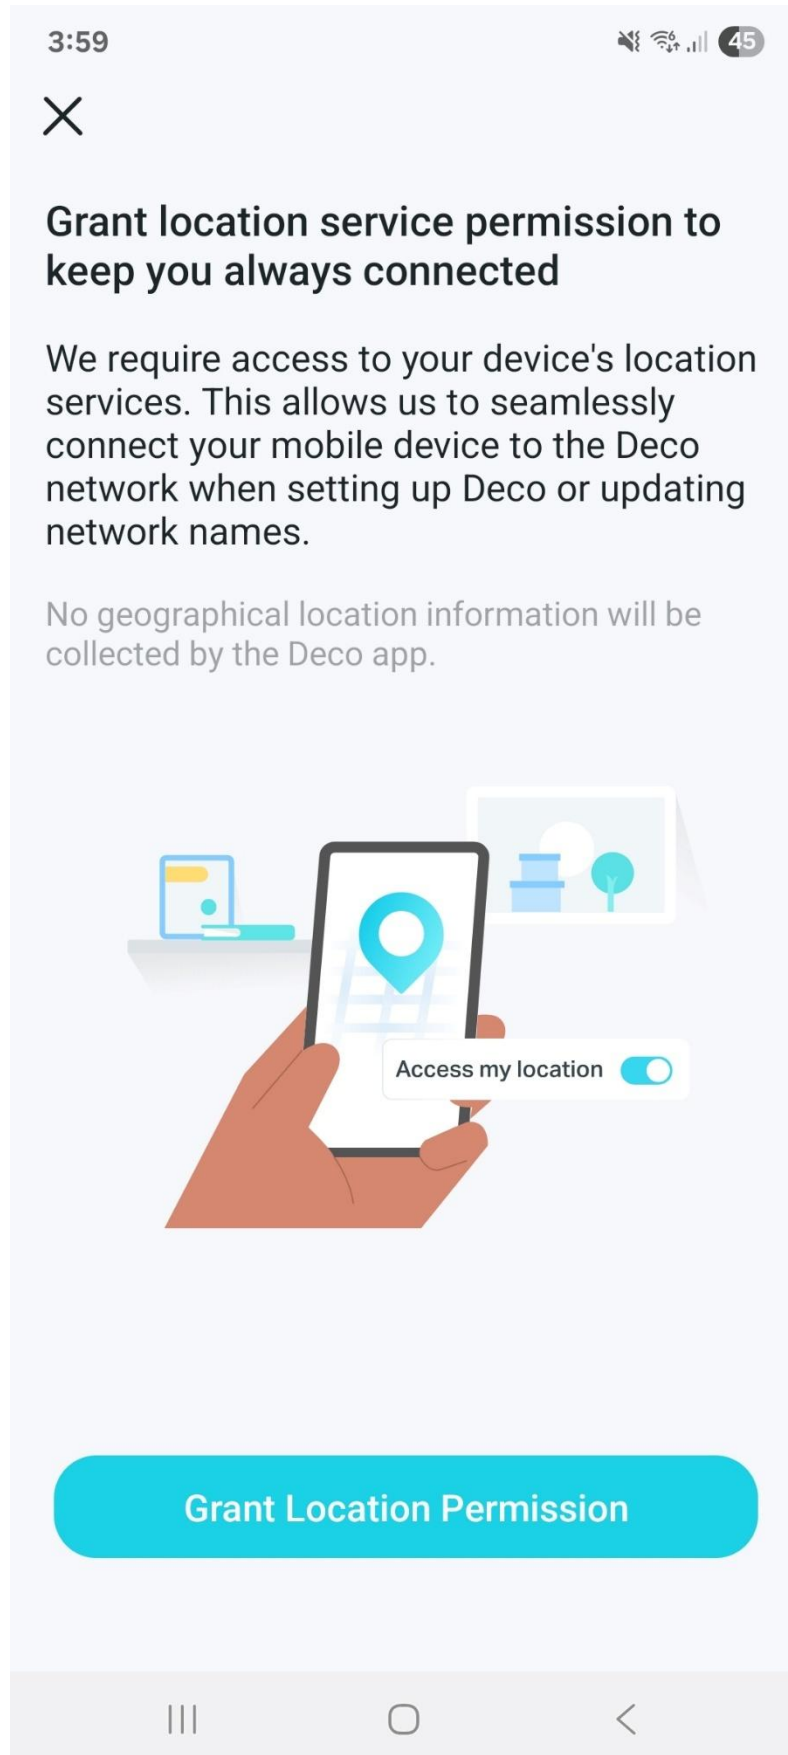

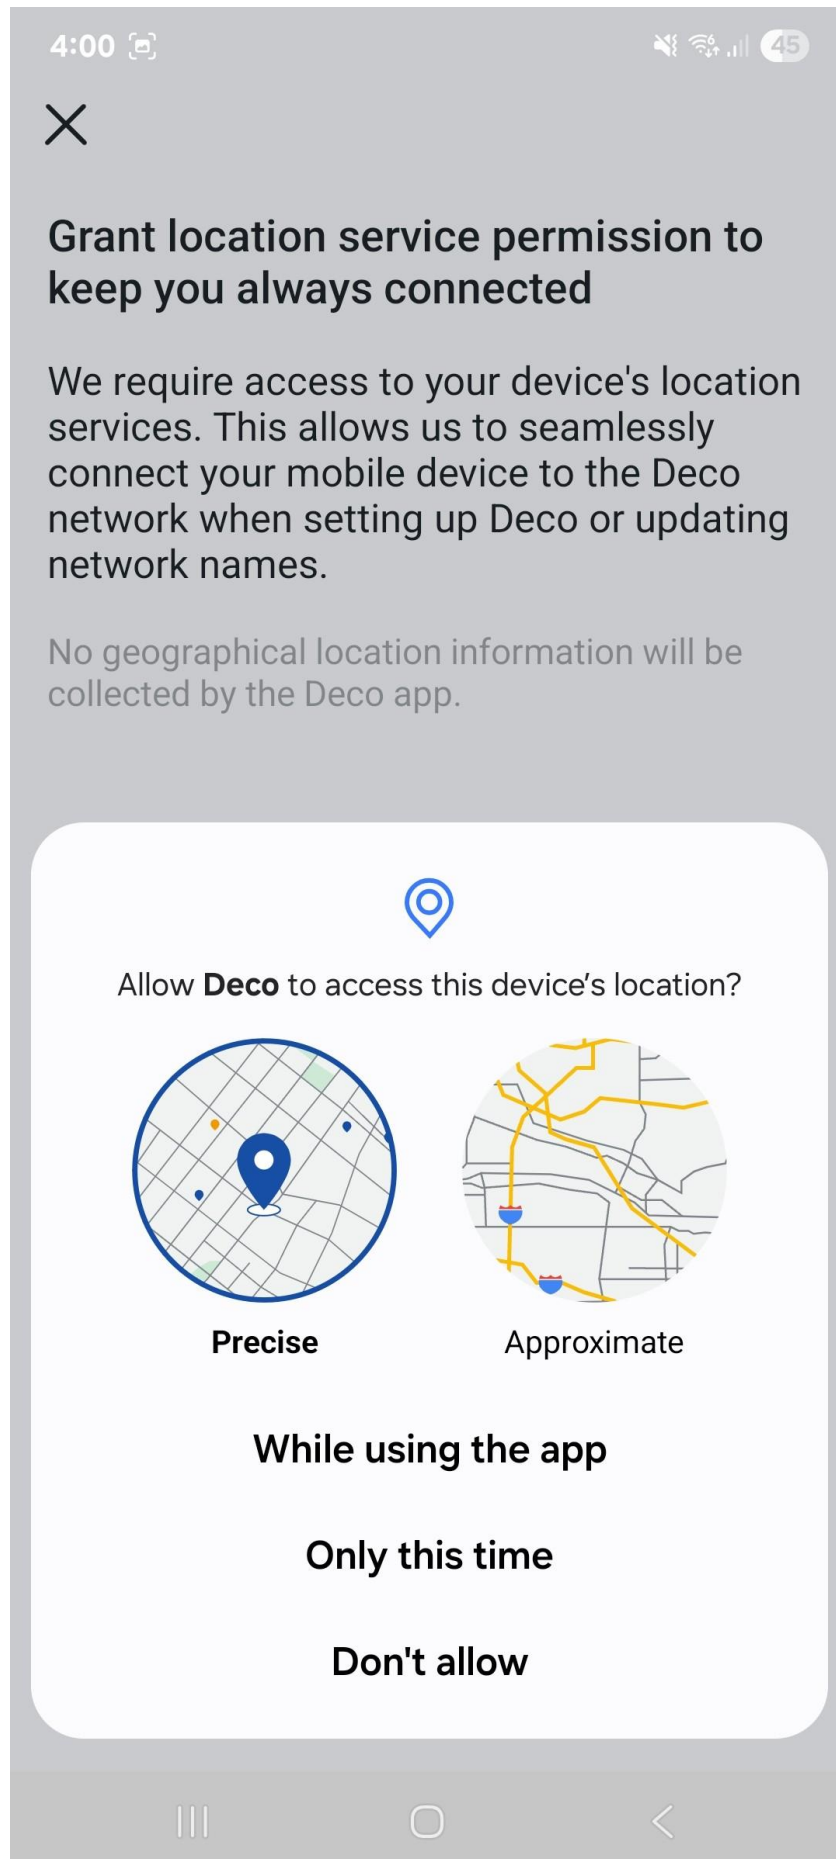


2. Select Bind to pair your modem to the Deco App

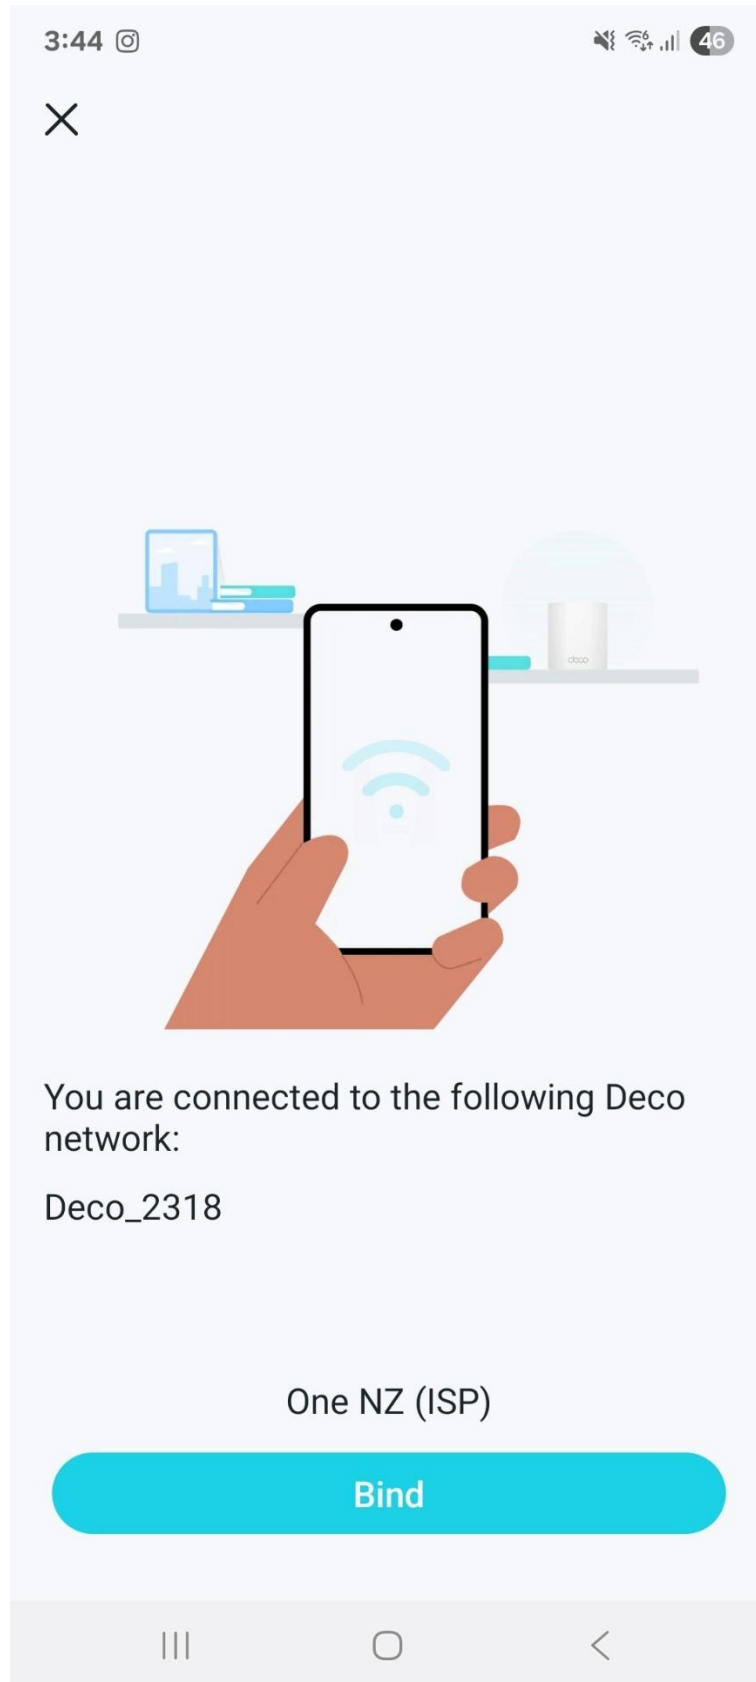

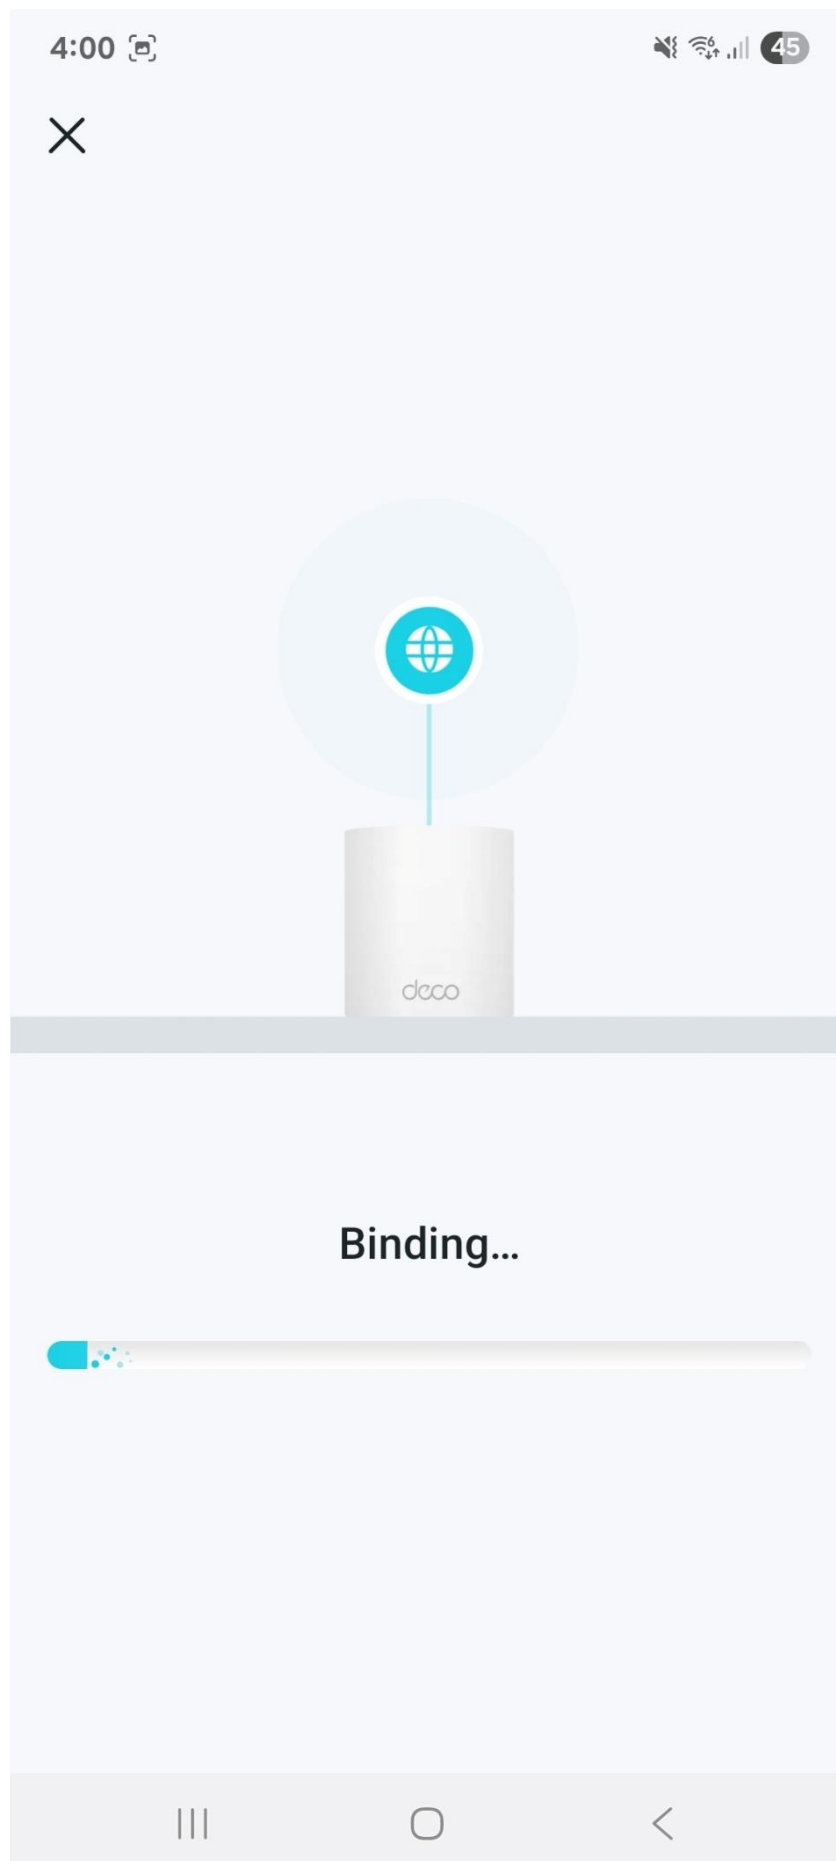

3.

4. You will then be taken to the home page of the app.

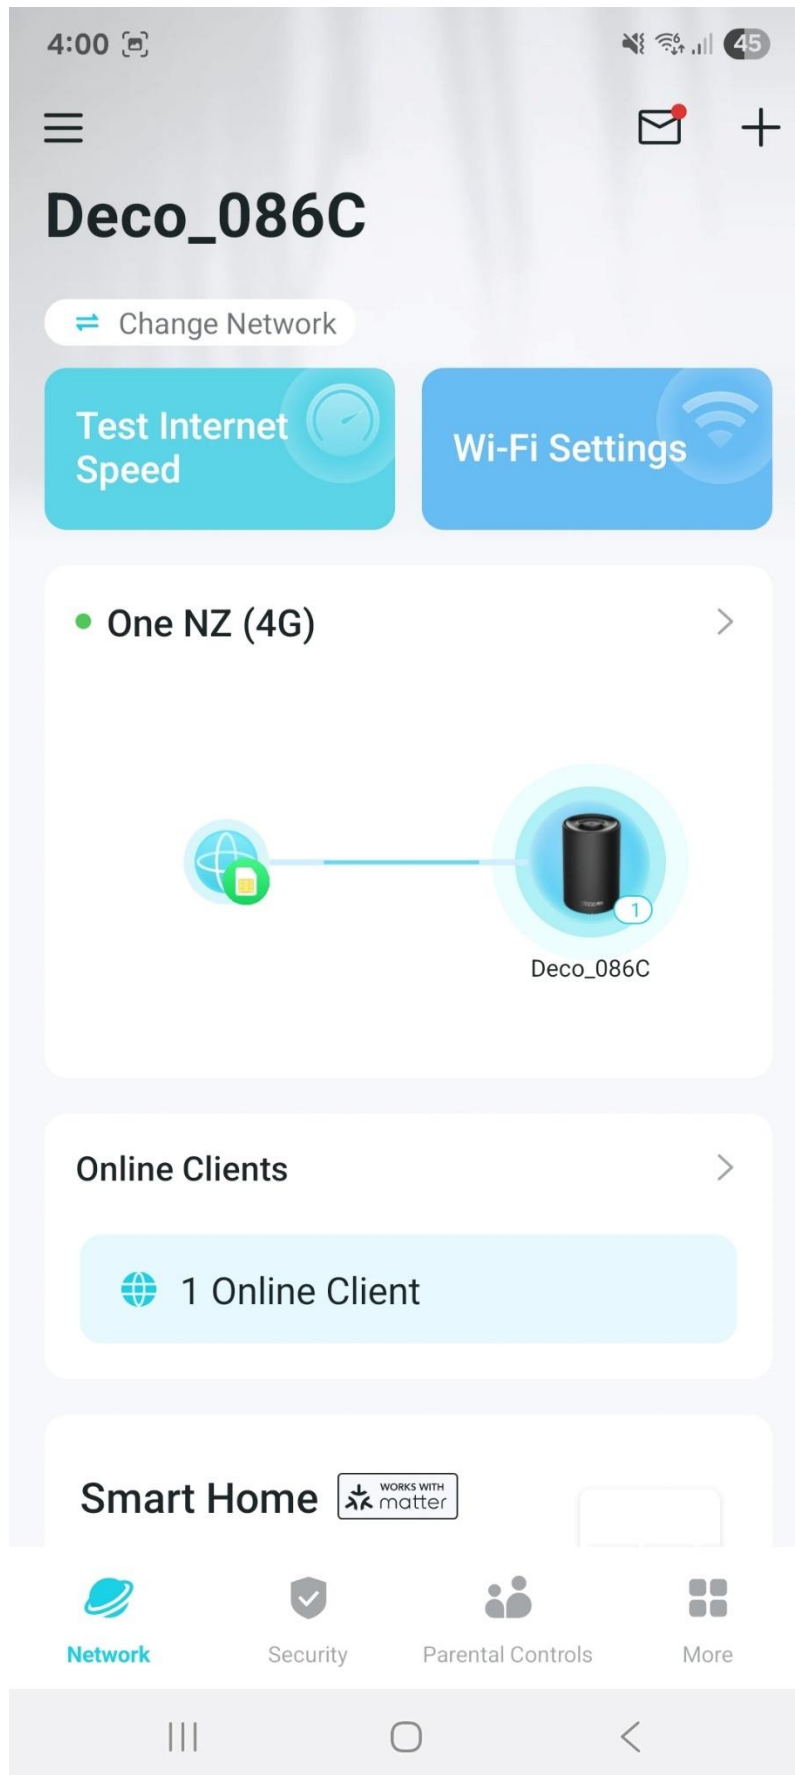

5. To check your signal levels from there. Select More then select Internet then Cellular WAN then Celluar Wan Settings.

Look for the RSRP to be lower than -110 eg -100 and RSRQ to be lower than -15 eg -10

