

X58 Full Set up Guide

Initial steps to follow


1. Ensure the Deco X58 is turned on and the light is flashing blue for more than 5 minutes
2. Download the TP-Link App from your app store
 - a. Google Play - https://play.google.com/store/apps/details?id=com.tplink.tpm5&hl=en_NZ
 - b. Apple App Store - <https://apps.apple.com/us/app/tp-link-deco/id1186159417>
3. A TP-Link account has been created and activated during the initial use of the app.

App Set up Steps


1. When you go onto the app or select to create a new network you will come to this first screen. Please select the arrow to go next




2. Allow the app to find nearby devices

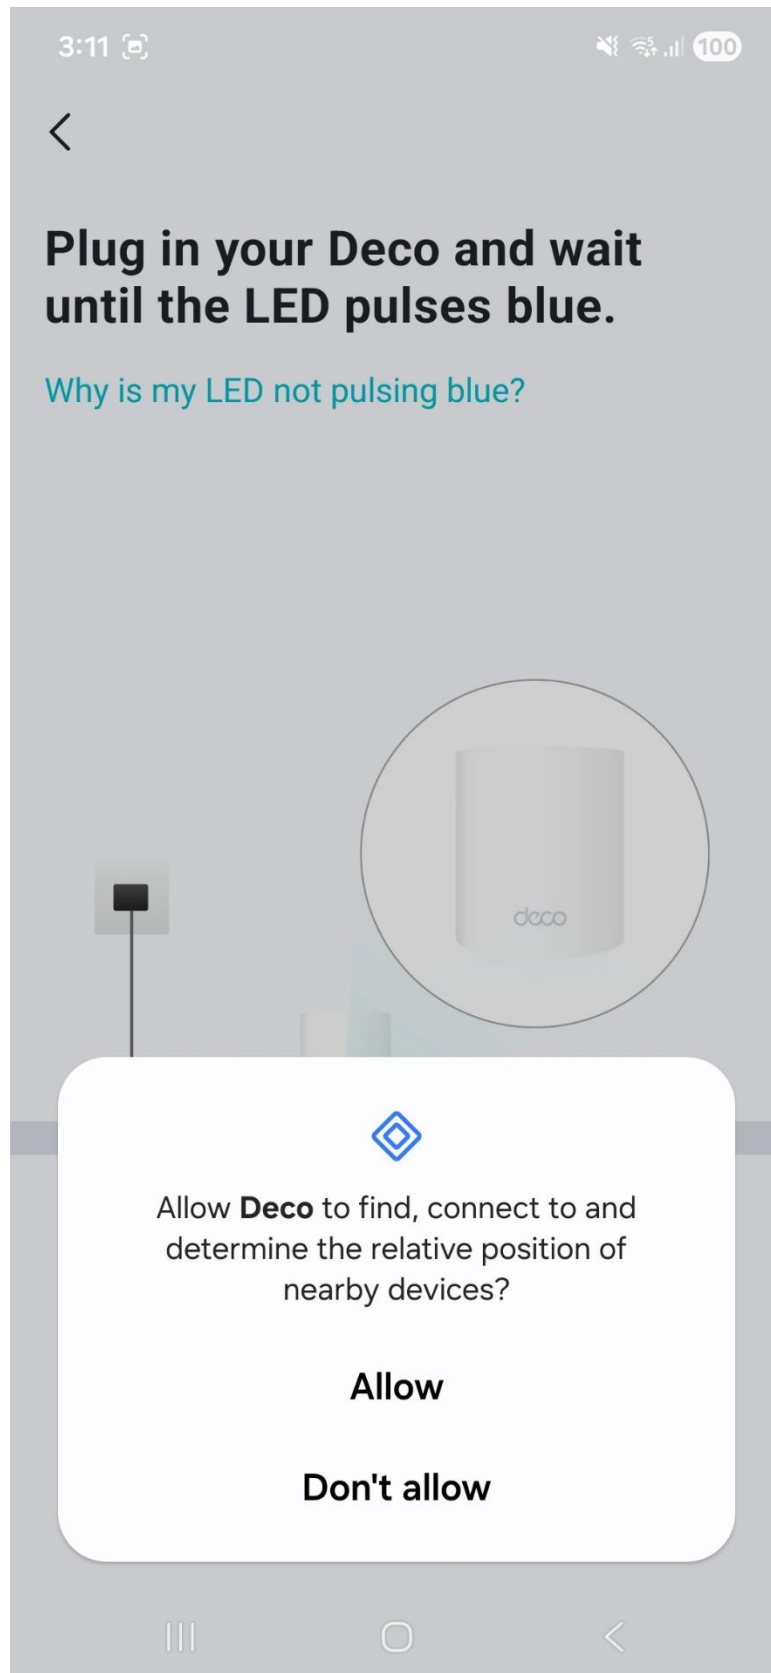


3. The app will then look for the deco network.

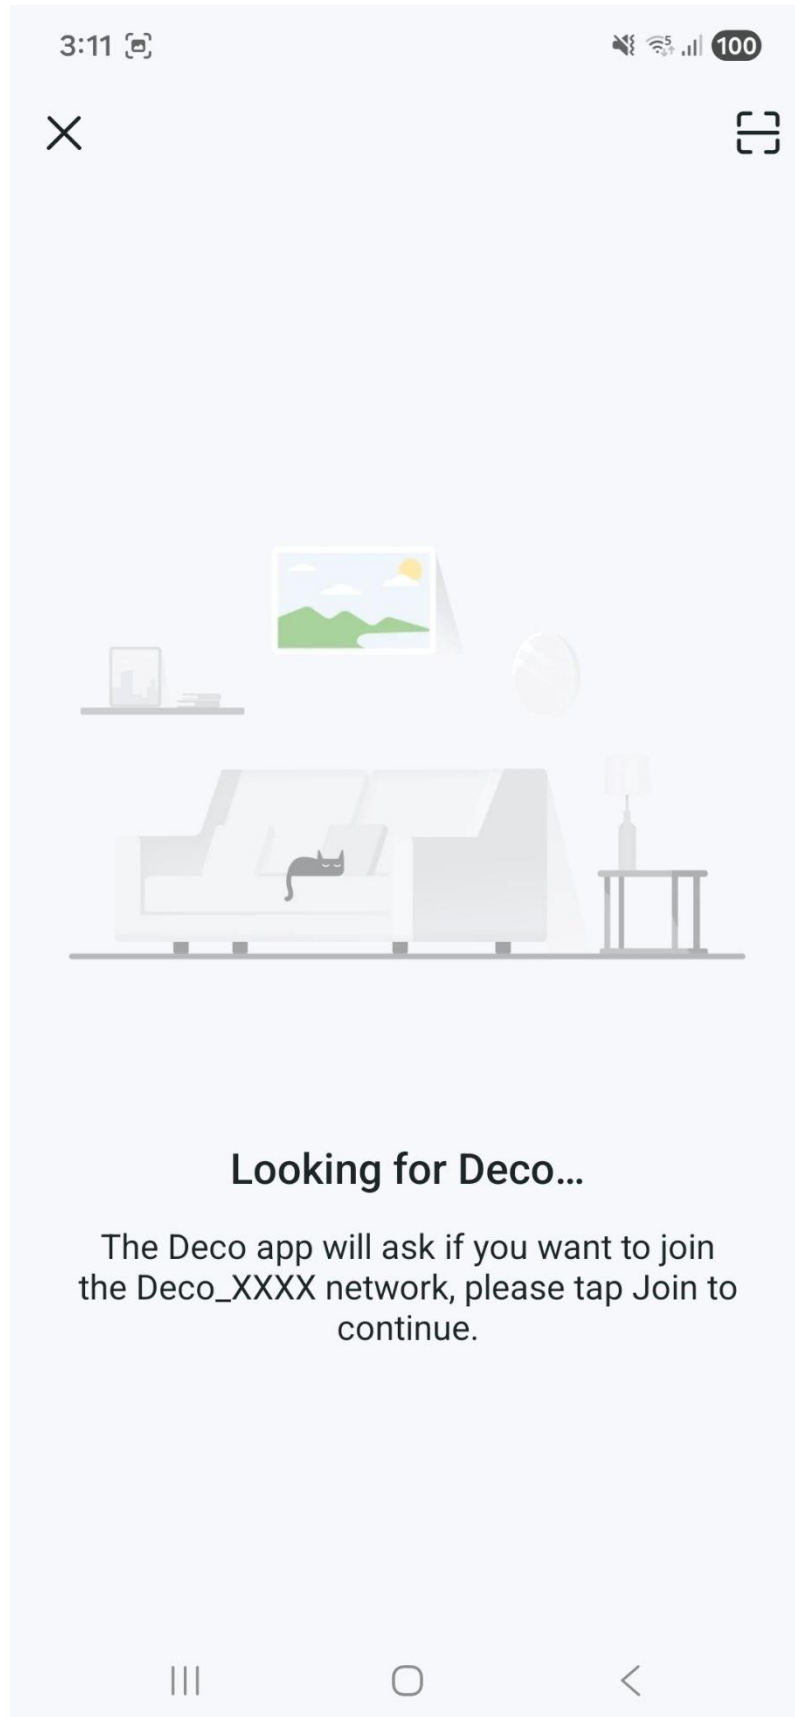


4. Once it has found the deco it will prompt you to connect

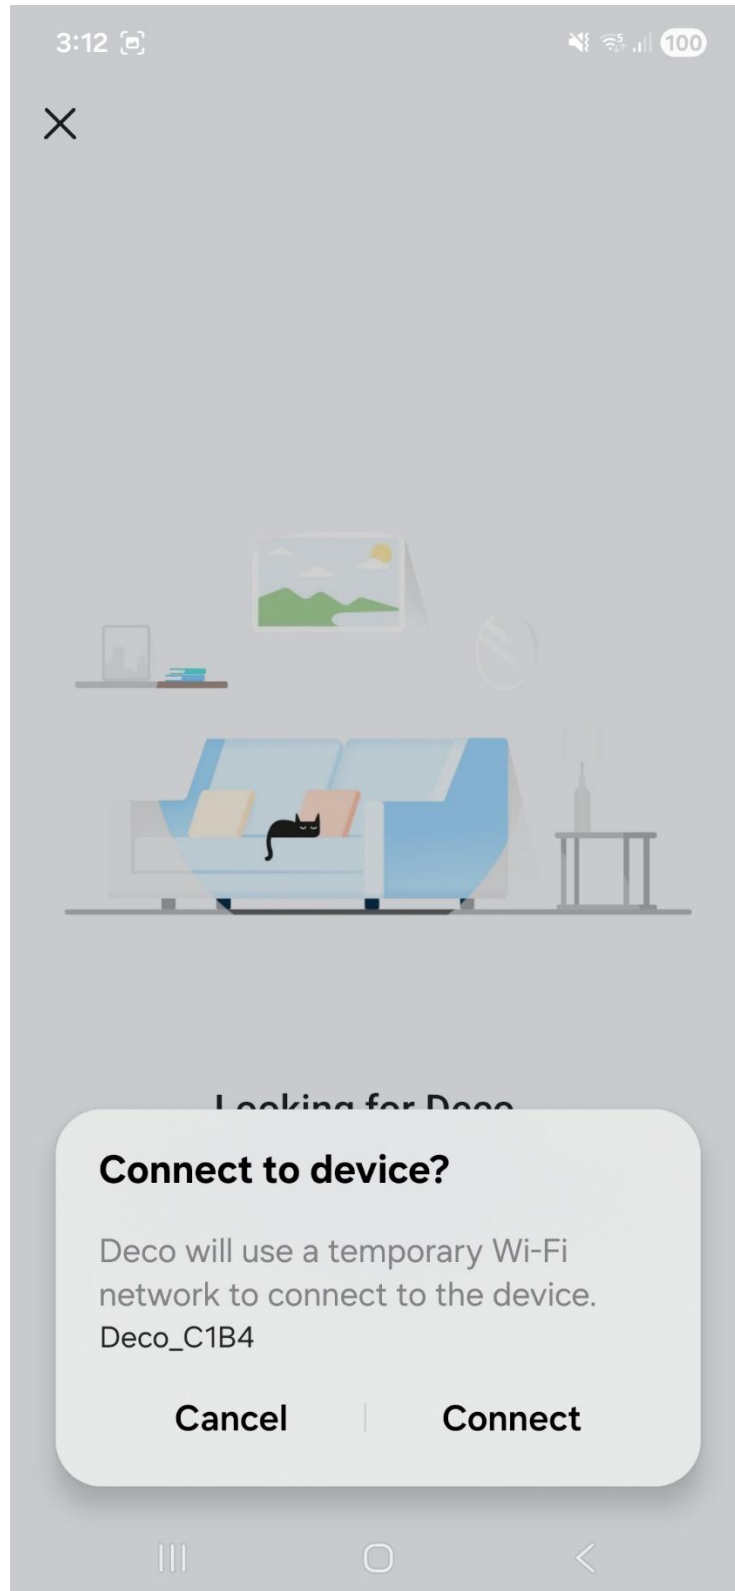


5. Once it has connected to the network select Set up the deco

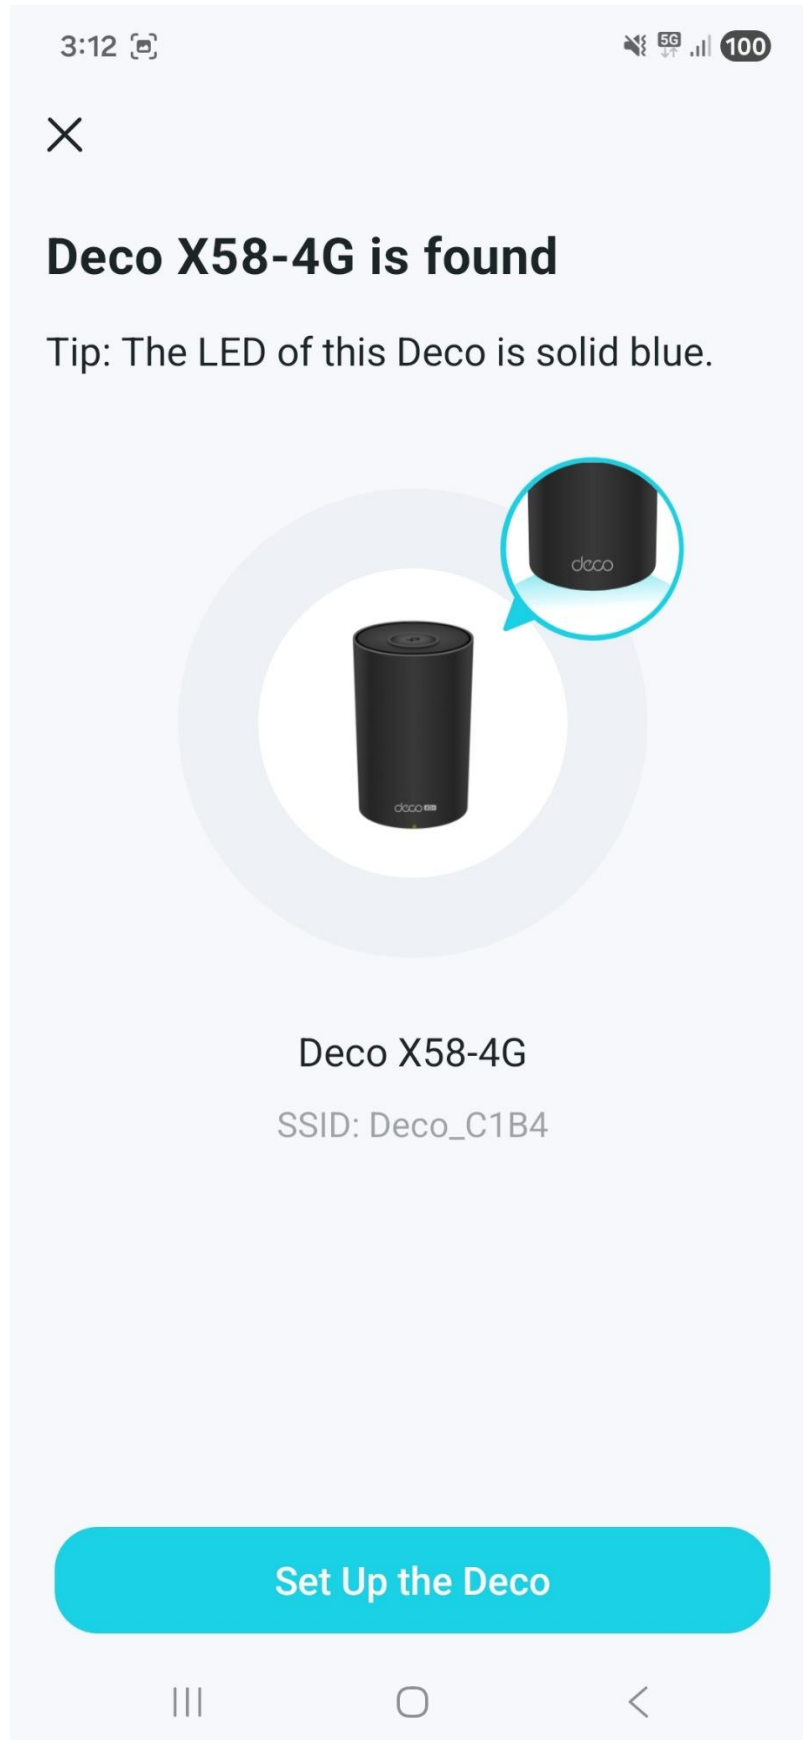

6. You will be asked how you want to use your product, select Use as a 3G/4G router

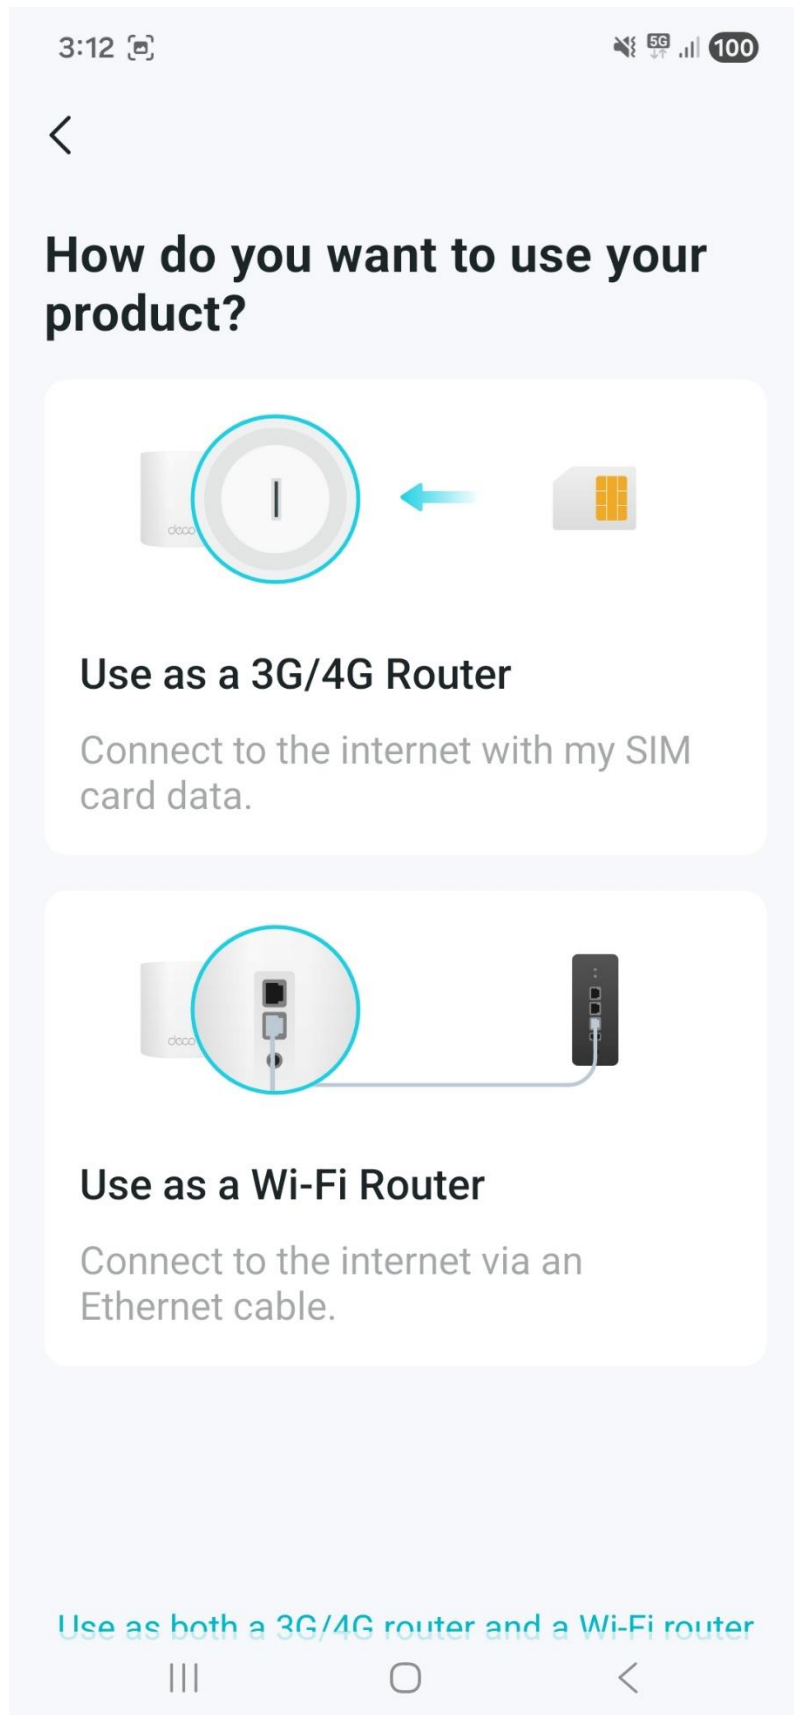

7. You will be asked to insert the SIM card. This will be inserted for you already

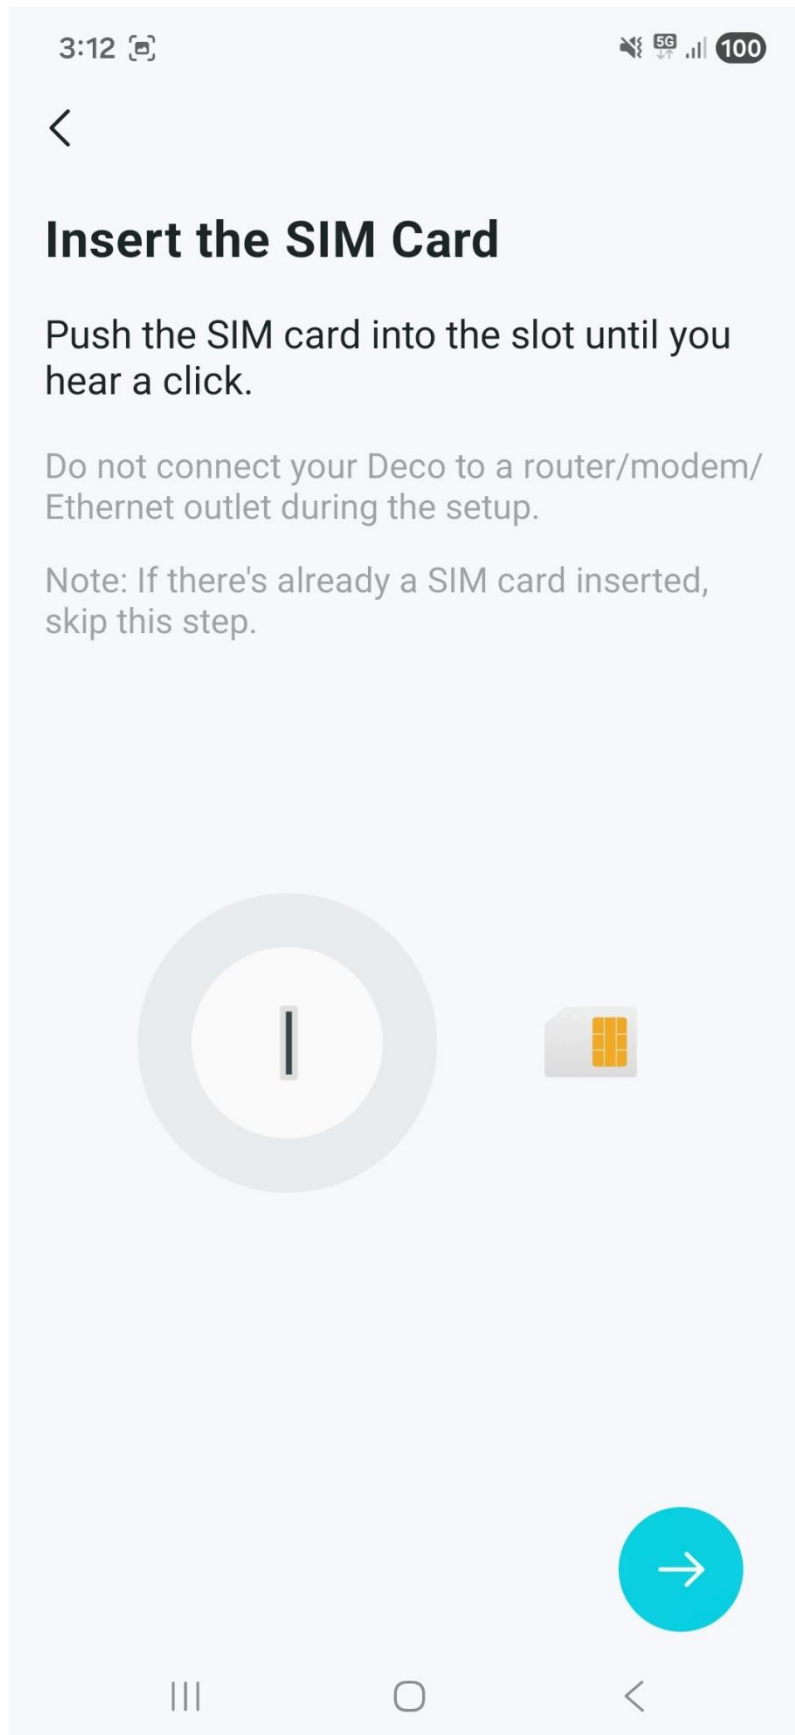

8. You will be asked where you have placed the modem. Select that and select next

3:12 [🔊] 5G [📶] 100

✕

Where do you place this Deco?


The location will be used as this Deco's name.

- ☐ Bedroom
- ☐ Hallway
- ☐ Kitchen
- ☐ Living Room
- ☐ Main Bedroom
- ☒ Office
- ☐ Study
- ☐ Custom


➔

☰ ○ <


9. You will then be asked to create your own Wi-Fi network. You can enter anything for the network name and the wi-fi password will need to be at least 8 characters long then select create
10. It will then go through creating your wi-fi network

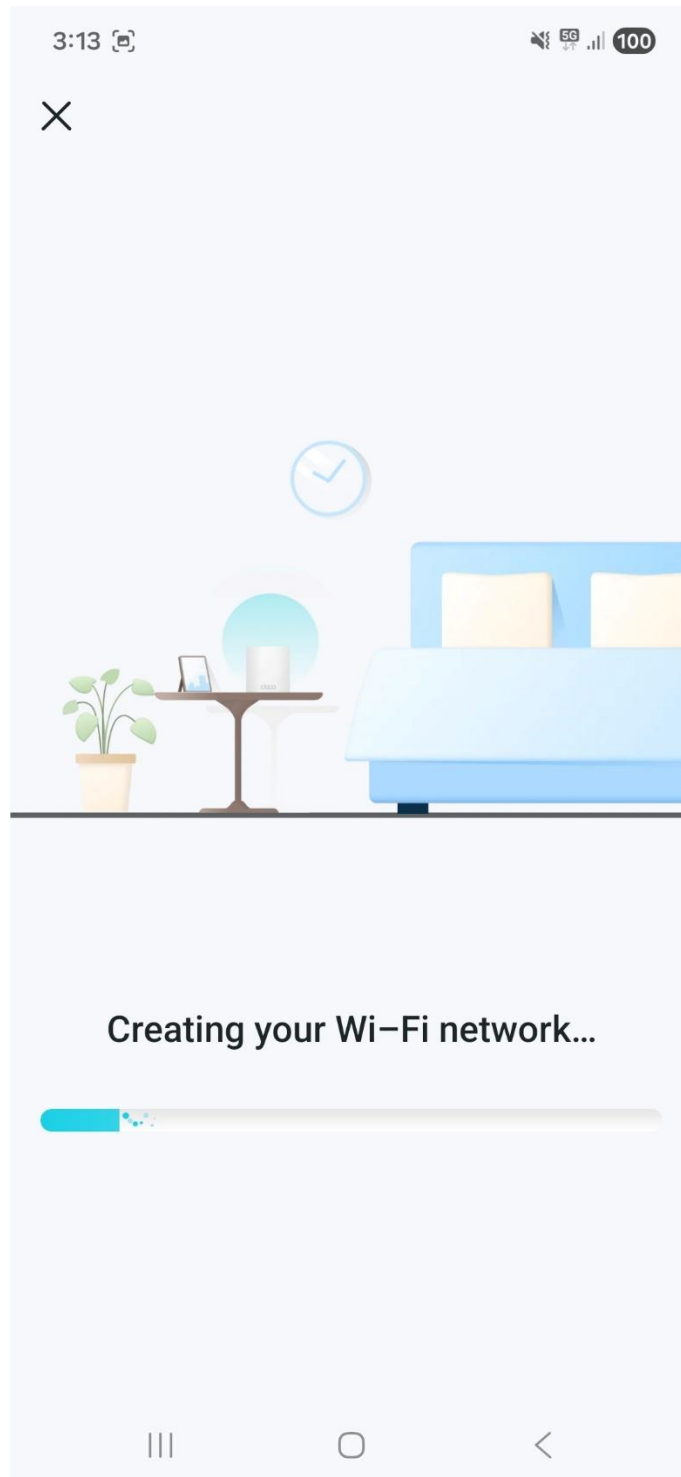


11. It will then connect to the created network once created

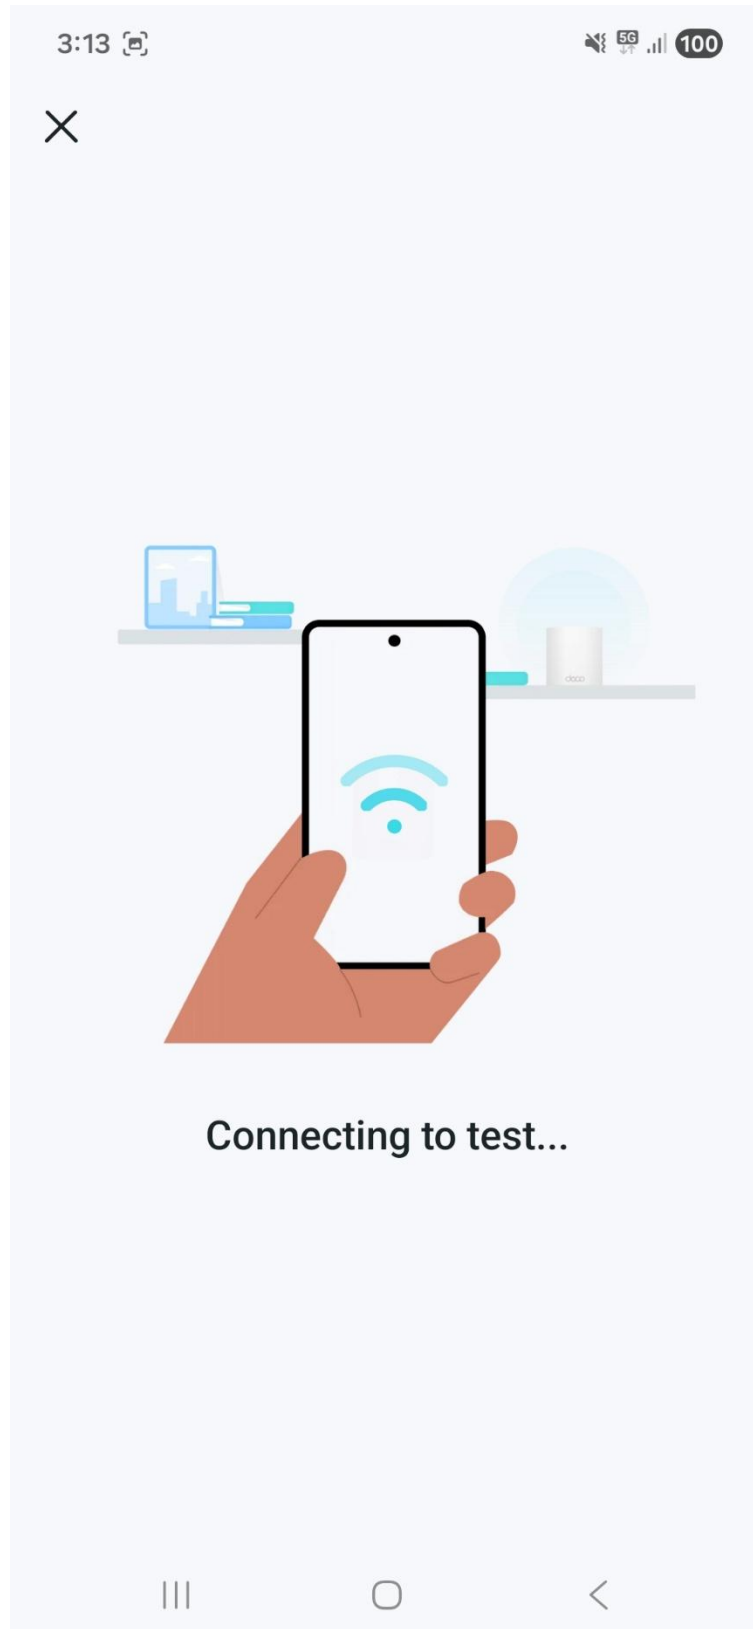


12. You will be prompted to save the wi-fi network to your phone and that will confirm it will remember to connect to it when in range

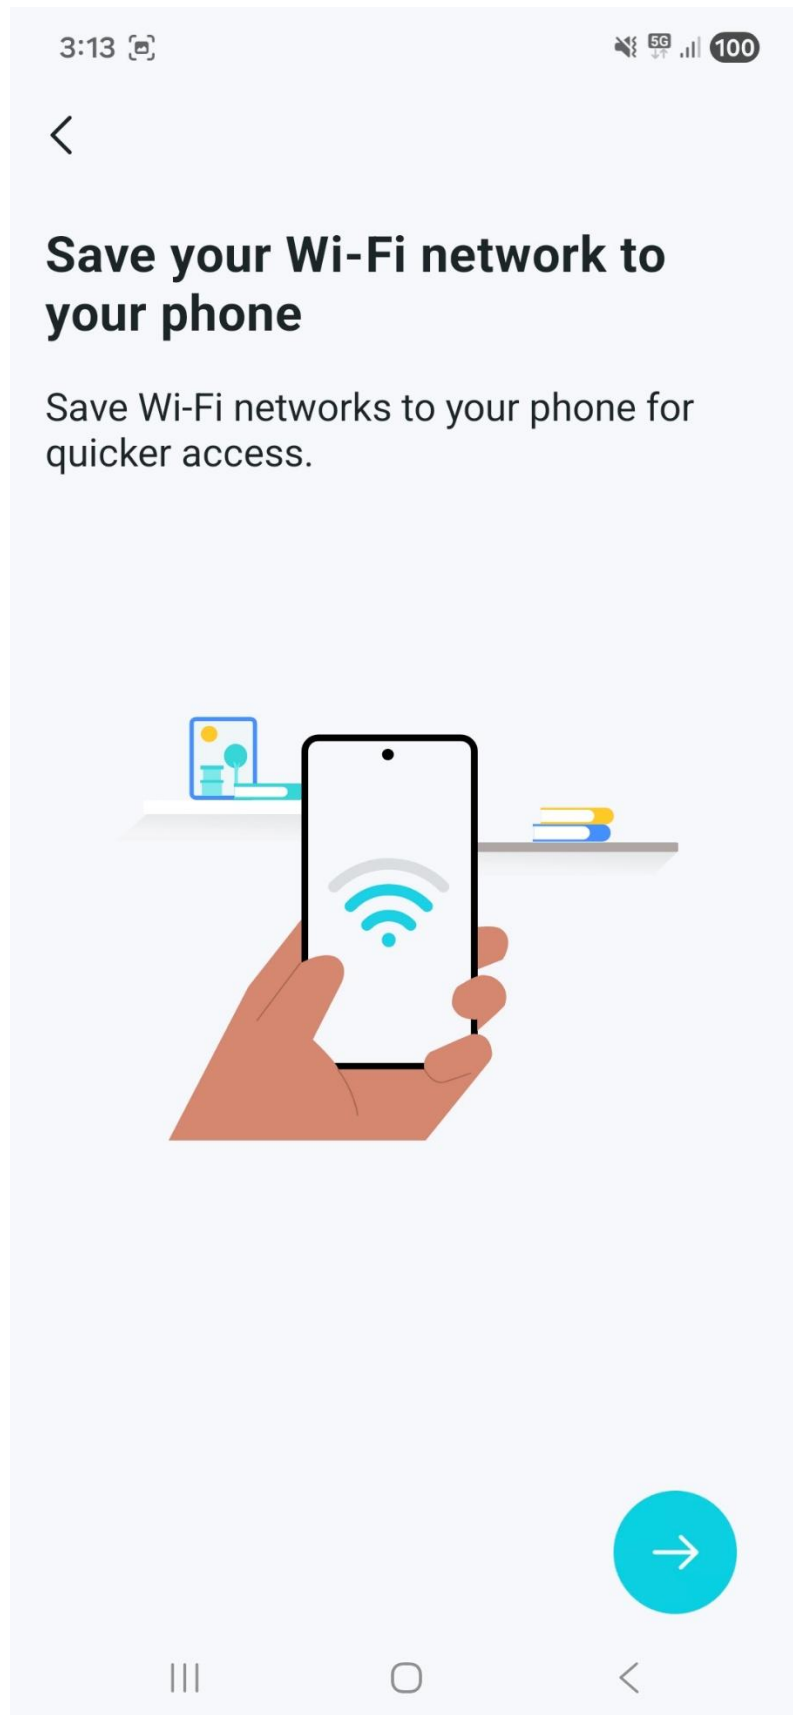


13. You will be taken to the final page to say it is all set up and the light on the modem will be solid green

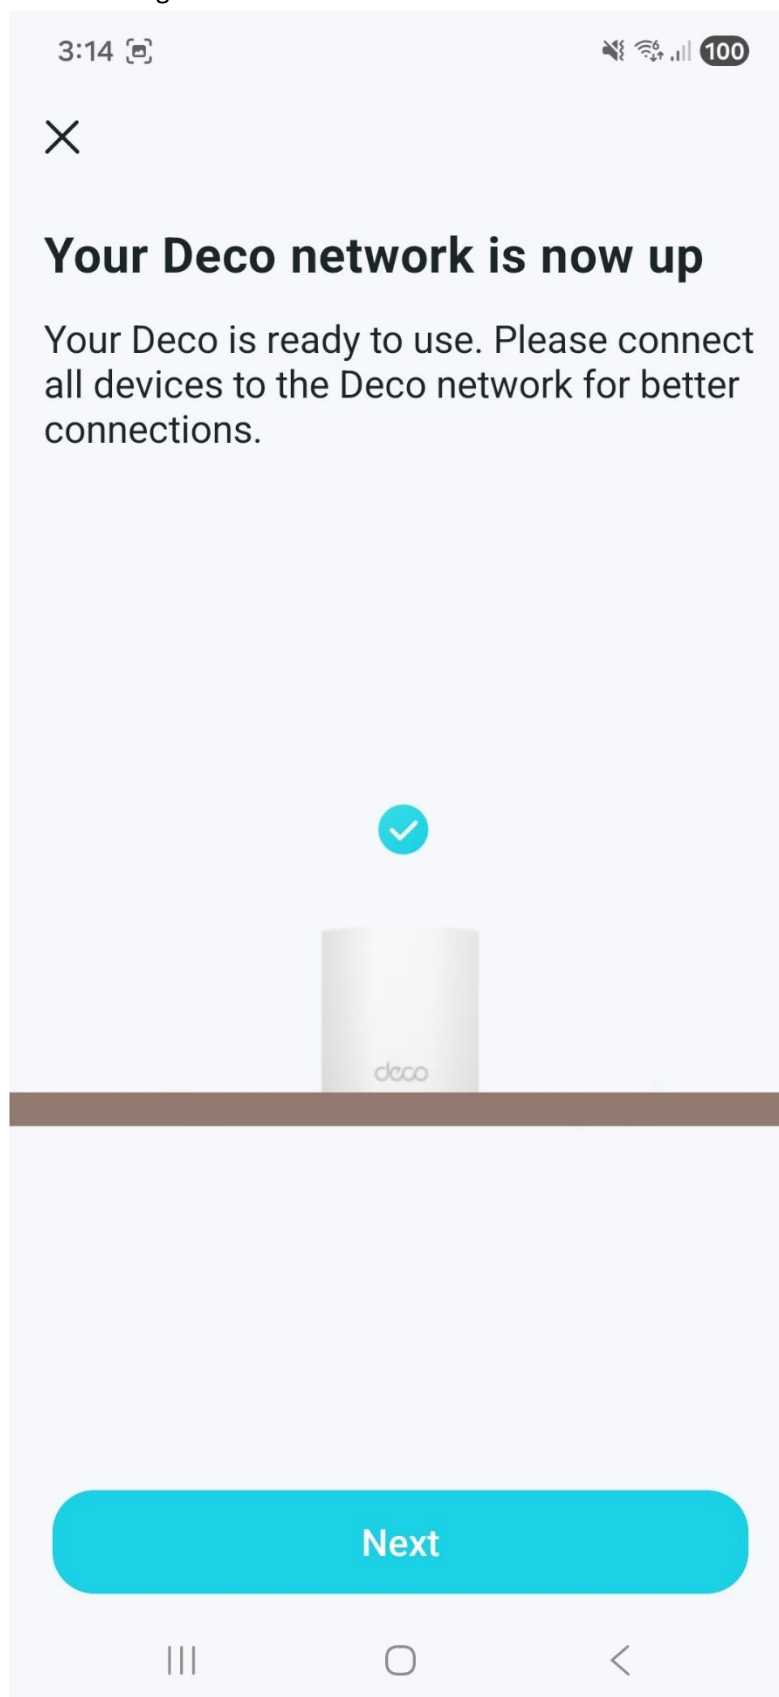

14. Click Done on the confirmation page and you will be able to use your connection and connect your other devices to the wi-fi

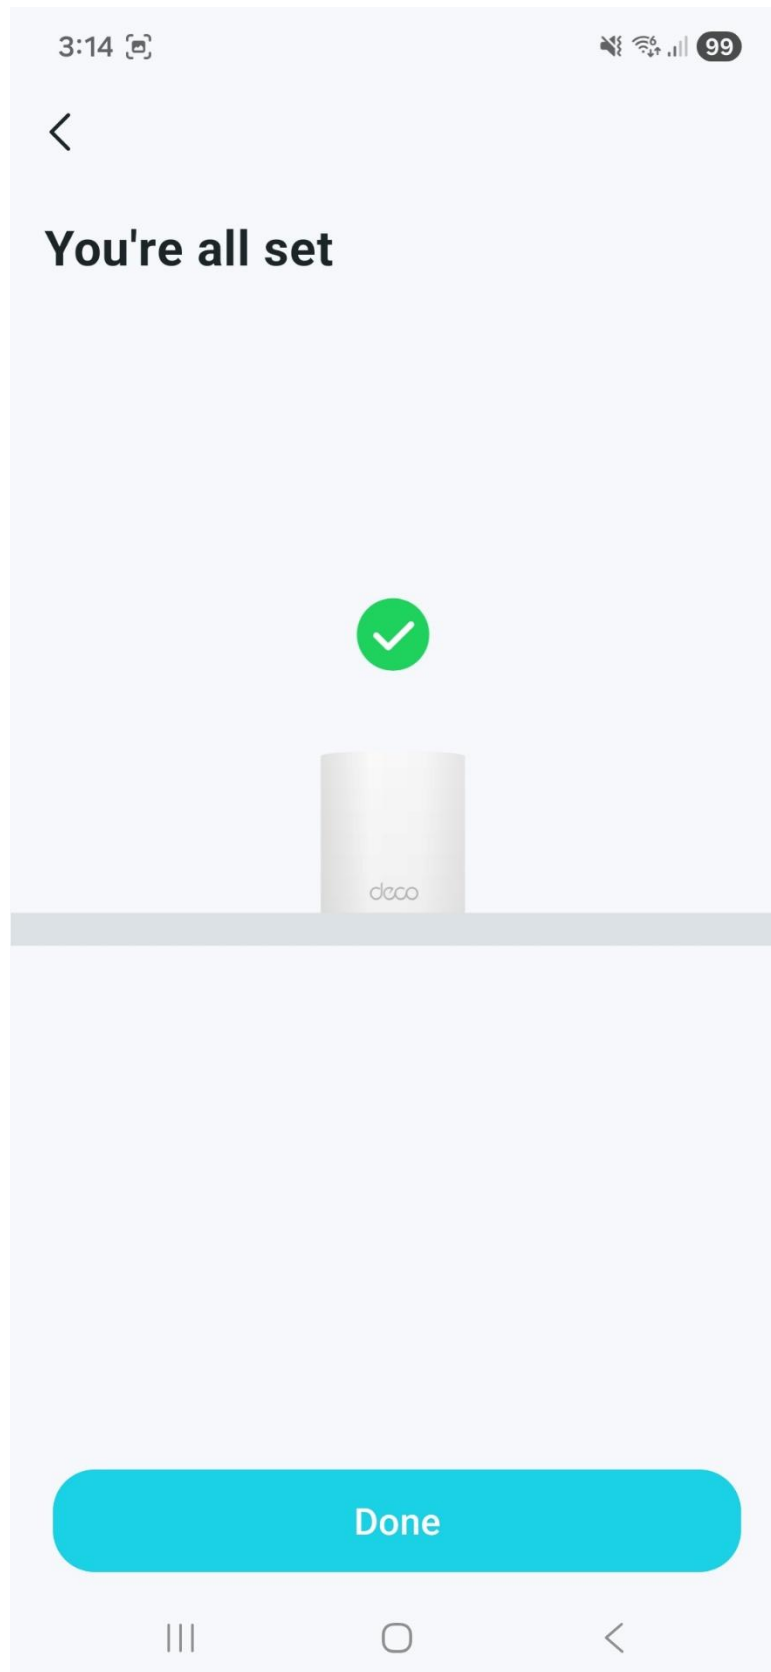

15. You will be taken to the home page of the modem as below and if you want to check your signal then select More then select Internet then Cellular WAN then Cellular Wan Settings.

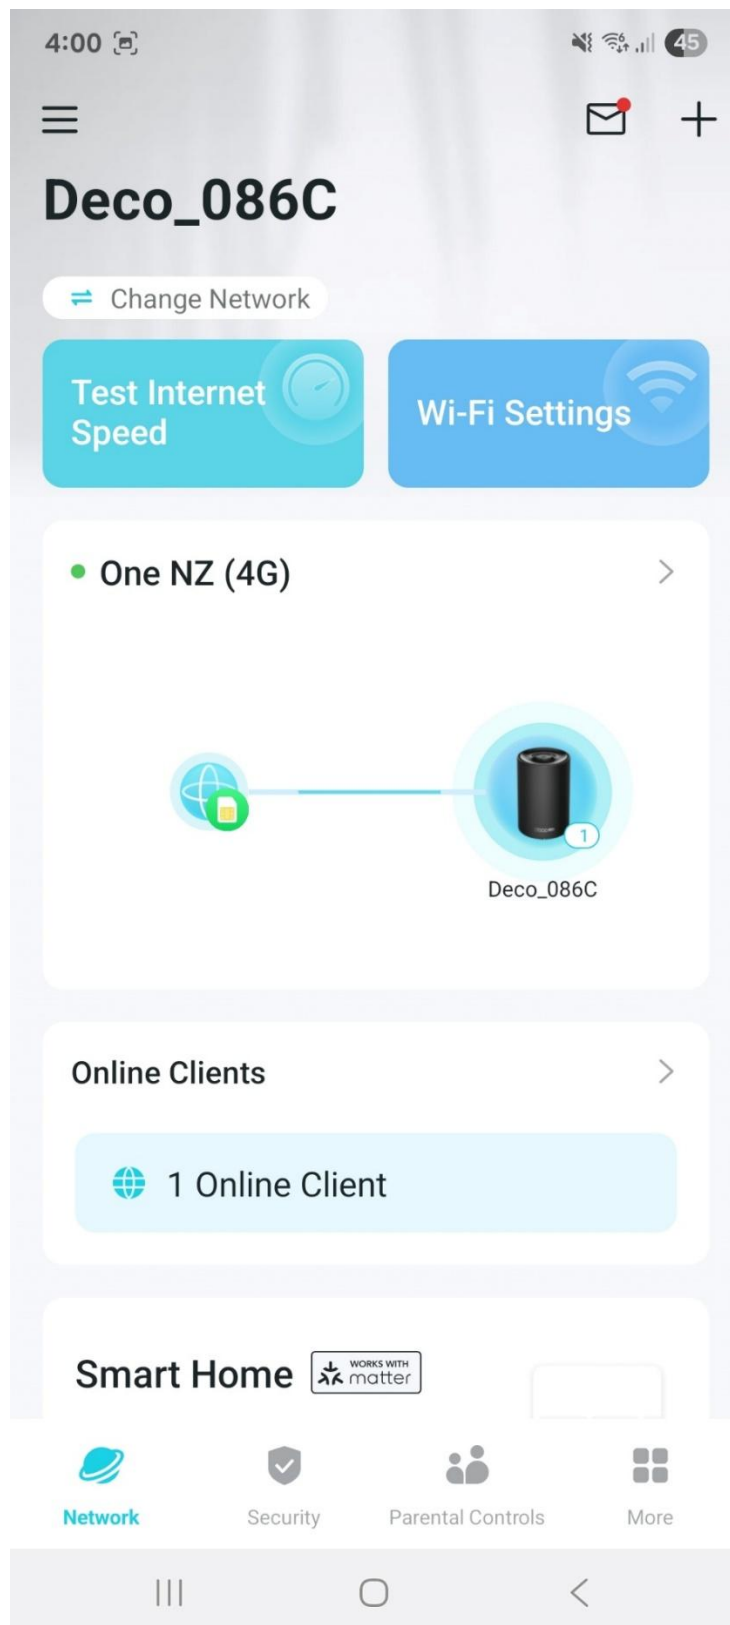

16. Look for the RSRP to be lower than -110 dBm eg “-100 dBm” and RSRQ to be lower than -15 dBm eg “-10 dBm”

